

## 2.5"/3.5" Portable Multimedia Enclosure Firmware Upgrade Procedures

ME747AK / ME747AP / ME820AP (for TV mode)

### Introduction:

Welland portable media enclosure – ME747AK/ME747AP/ME820AP, provides friendly interface to help users upgrading embed firmware to fix the compatibility problems via TV in the field. Please check the following operating procedures:


### TV Mode Firmware Upgrade (After V 2.7):

#### STEP-1

**(Please note: Don't turn off power during firmware- upgrading. Otherwise, it'll cause the device of ME-747AK/ME747AP/ME820A0 damaged)**

(a) First of all, Please download the latest firmware bank30.rom from Welland website

(b) Please copy the firmware to the first partition of ME747AK/ME747AP/ME820AP.

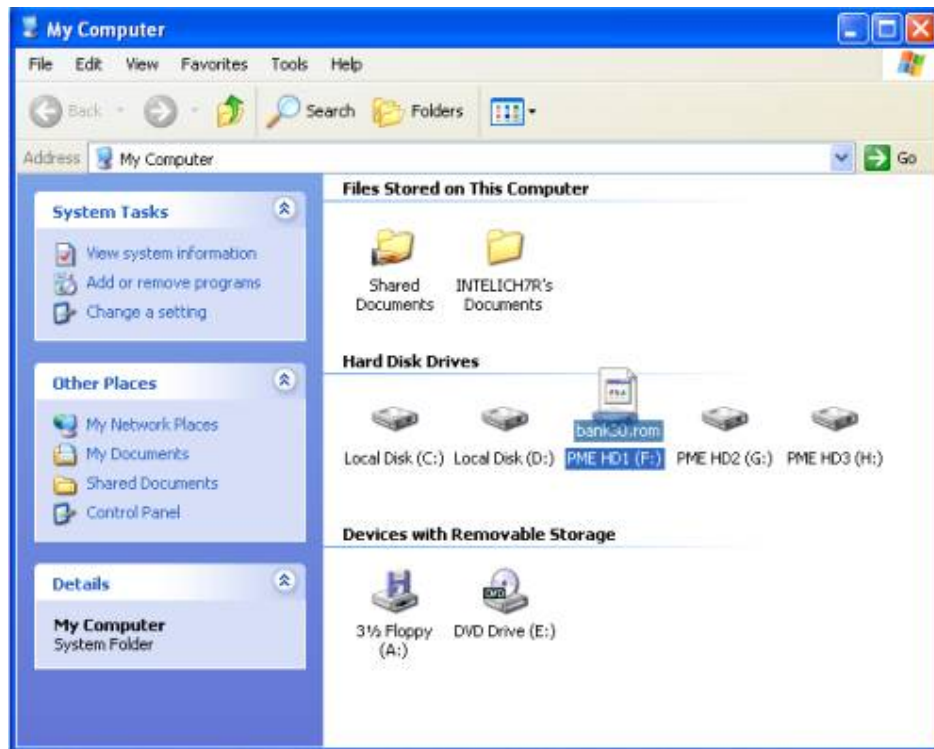

(c) Please connect audio & video cable with TV.

(d) Please make sure at TV mode and then you will see the main menu. **Please enter library and find bank30.rom, then press PLAY button to start upgrade**



Step-1



Step-2



Step-3



Step-4

(e) The upgrade procedures will be completed till there is showing main menu on TV.

## STEP-2

(a) While upgrade procedures is completed, you have to change the mode-setting from TV mode to device mode, and connect ME747AK/ME747AP/ME820AP with PC via USB cable, then delete the target firmware ([bank30.rom](#)).


## TV Mode Firmware Upgrade (Before V 2.6) :

### STEP-1

**(Please note: Don't turn off power during firmware- upgrading. Otherwise, it'll cause the device of ME-747AK/ME747AP/ME820A0 damaged)**

(a) First of all, Please download the latest firmware bank30.rom from Welland website

(b) Please copy the firmware to the first partition of ME747AK/ME747AP/ME820AP.

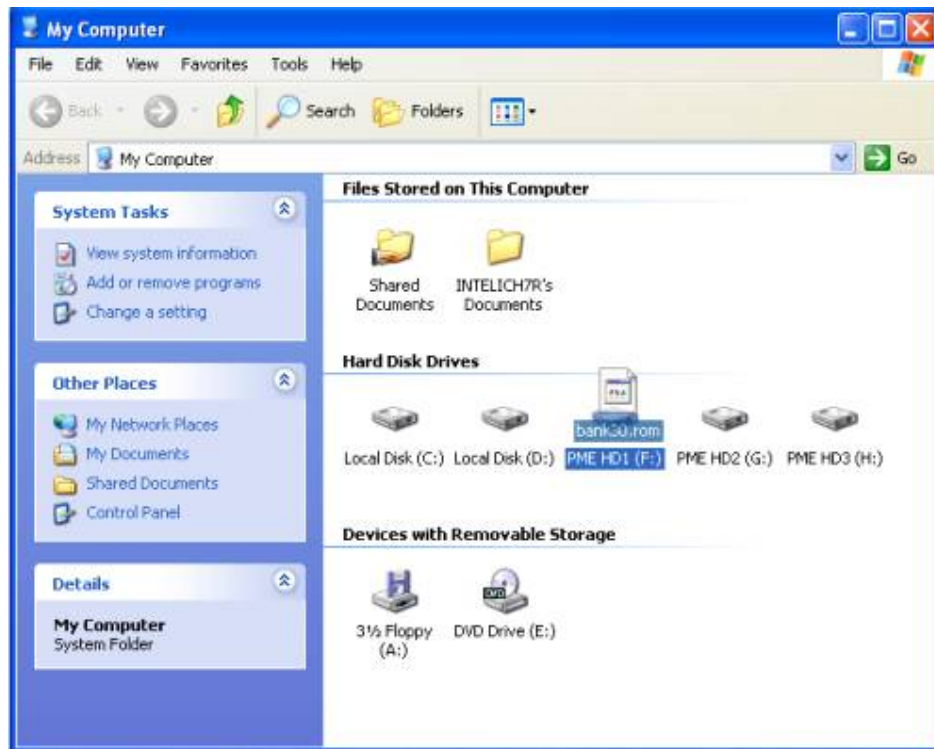

(c) Please connect audio & video cable with TV.

(d) Please switch to TV mode. During upgrade firmware process, please never turn off power or it would cause unexpected damage of ME747AK/ME747AP/ME820AP.



Step-1



Step-2



Step-3



Step-4

(e) The upgrade procedures will be completed till there is no signal on TV.

## STEP-2

(a) While upgrade procedures is completed, you have to change the mode-setting from TV mode to device mode, and connect ME747AK/ME747AP/ME820AP with PC via USB cable, then delete the target firmware ([bank30.rom](#)).

